

FLUE PIPES INSTALLATION AND USER MANUAL

Skamet flue pipes comply with standard EVS-EN 1856-2:2009.

INSTALLATION

1. Preparing the chimney opening

- The opening must be slightly larger than the outer diameter of the flue pipe
- Seal the gap around the pipe with **fireproof mineral wool or fireproof rope**
- Recommended sealing gap: approx. 10 mm (non-combustible material)
- The flue pipe must not extend too deeply into the chimney

2. Connecting the flue pipes

- First secure the flue pipe to the sauna heater or furnace
- Ensure the connection is tight and secure
- If necessary, use **heat-resistant silicone sealant** (up to 1500 °C)
- After installation, check all connections for tightness

SAFETY REQUIREMENTS

- Minimum distance from combustible materials:

3 × the flue pipe diameter, but not less than 500 mm

- The safety distance may be reduced:
 - to 1/2 with single heat shielding or to 1/4 with double heat shielding
- Only non-combustible and heat-resistant materials may be used

USE AND MAINTENANCE

- Inspect and clean the flue pipe regularly
- Maintenance work may only be carried out when the flue pipe has completely cooled down

Important!

Installation of flue pipes must comply with all applicable fire safety and building regulations. Installation must be performed by a qualified specialist.